Model Code/s:
EVD6

Product:
Vented Dryer

Document:
User Manual

Esatto

Dear Customer,

Congratulations on purchasing your vented dryer. The *Esatto* brand is proudly distributed within Australia by Residentia Group Pty Ltd.

Please refer to the warranty card at the rear of this manual for information regarding your product's parts and labour warranty, or visit us online at www.residentiagroup.com.au.

At Residentia Group, we are customer obsessed and our Support Team are there to ensure you get the most out of your appliance. Should you want to learn more about your vented dryer such as the various drying modes or importantly taking care of the dryer, our Support Team are here to help.

You can use our online Support Centre at anytime by visiting http://support.residentiagroup.com.au, or you can contact us via phone by dialling: 1300 11 HELP (4357).

It is important that you read through the following use and care manual thoroughly to familiarise yourself with the installation and operation requirements of your appliance to ensure optimum performance.

Again, thank you for choosing an *Esatto* appliance and we look forward to being of service to you.

Kind Regards,
The Residentia Team

Residentia

T 1300 11 4357
E info@residentiagroup.com.au
W residentiagroup.com.au
ACN 600 546 656

Residentia Group
PO Box 581
Stanhope Gardens
NSW Australia 2768

User Manual:

Esatto

Contents: Page:

Safety instructions 4
Your Esatto Vented Dryer 4
Installation Instructions 5
Operating your Vented Dryer 8
Cleaning and maintenance 10
Troubleshooting 10
Warranty information 12
Notes 14

Safety Instructions

- This appliance is only intended for use within a domestic environment only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

UNPACKING

- During transportation, protective packaging was used to protect the appliance against any damage. After unpacking, please dispose of all elements of packaging in a way that will not cause damage to the environment. All materials used for packaging the appliance are environmentally friendly; they are 100% recyclable and are marked with the appropriate symbol.

Caution! During unpacking, the packaging materials (polythene bags, polystyrene pieces, etc.) should be kept out of reach of children.

DISPOSAL OF THE APPLIANCE

- Old appliances should not simply be disposed of with normal household waste, but should be delivered to a collection and recycling centre for electric and electronic equipment. A symbol shown on the product, the instruction manual or the packaging shows that it is suitable for recycling.
- Materials used inside the appliance are recyclable and are labelled with information concerning this. By recycling materials or other parts from used devices you are making a significant contribution to the protection of our environment.
- Information on appropriate disposal centres for used devices can be provided by your local authority.

Your Esatto Vented Dryer

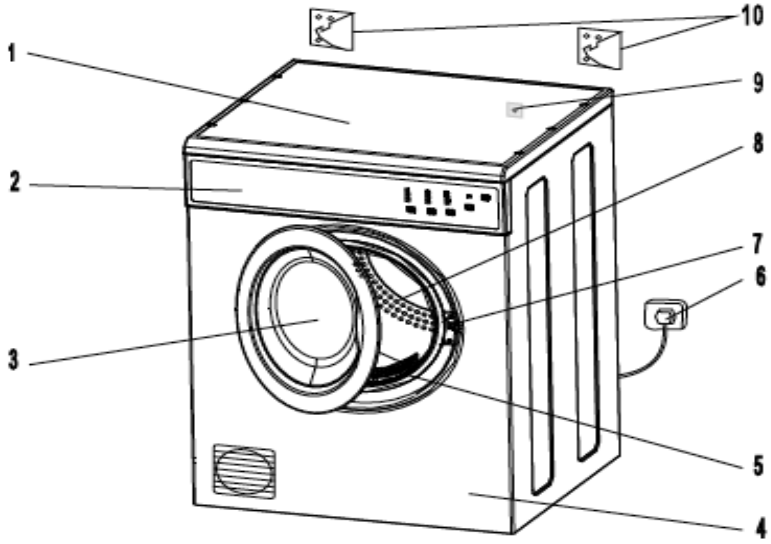

1. Topboard	2. Control Panel	3. Door	4. Cabinet
5. Filter	6. Power Lead	7. Door Lock	8. Tumbling Drum
9. Reset Button	10. Wall Mounting Brackets		

Installation Instructions

POWER SOURCE AND GROUNDING
It's recommended to use the dryer on it's own dedicated power outlet for both convenience and safety. The power outlet must be grounded.

Important! If the power cord is damaged, it must be replaced by Residentia Group or one of it's authorised service representatives. Please contact 1300 11 HELP (4357) and ensure the appliance is completely disconnected from the power supply.

PRECAUTIONS:

◆Do not store or install the dryer where it will be exposed to water or the weather. If unavoidable, please dry the dryer before each use.

◆Please install dryer in a well ventilated area for better air circulation and to avoid obstructing air intake passage.

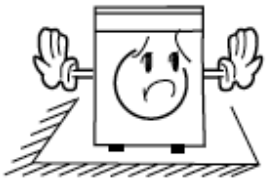

◆To aviod problems from wet clothes minimize risk, dehydrate items before placing inside the dryer.

◆Do not spray combustible aerosols near the dryer during use. If accidental spray occurs do not touch the plug or start/ pause button.

◆Do not dry any clothes that are contaminated with combustible materials: i.e. Gasoline, methylated spirits, etc.

◆Dont operate this dryer if it is damaged, malfunctioning,partially disassembled or has missing or broken parts.

◆When the dryer is working, the back side will become hotter. In order to avoid such risk, The dryer is not intended for use by young children or infirm persons without supervision.

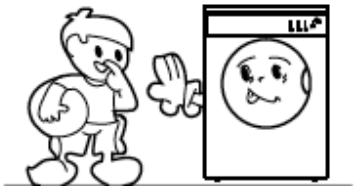

◆Please do not use the machine if your feet or hands are wet.

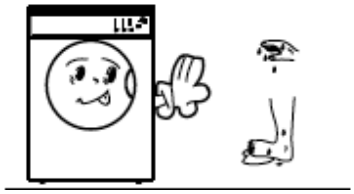

PRECAUTIONS (Continued):

◆To avoid deformation of the control panel, do not place any heavy or hot articles on top of the dryer.

◆Do not try to dry raincoat or fluff clothes, or items containing rubber or elastic materials on any heat setting.

◆To avoid scalding, do not open the dryer door until the program has completed.

This product belongs to type I electronic products and please take note of safety problem accordingly:

1.It is rule to use power which is buried in the earth and will not touch any socialequipments such as gas pipe or water pipe etc. Make sure the difference of different lines and they are not connected.

2.Please use special socket which is according to National Standard and will endure 10A current.

To be safe, please make improvements as soon as possible according to the rules and suggestions mentioned above.

Clothes with the following markings shall not be dried in this dryer.

Not used for dryer in the tub



Hang for dry

Drip dry



Flat dry

Dry automatically

SIMPLE INSTALLATION:

→ **Step 1:**
Your Esatto vented dryer should be placed in a well ventilated area with no less than 10cm distance from the wall. If placed in a room such as a bathroom, it is recommended that there are no obstacles within 1.5m of the dryer to allow ventilation.

→ **Step 2:**
Use a spirit level to ensure that the dryer is level, either when sitting on the ground, bench or wall mounted. It is critical that the dryer is level during operation, otherwise damage can be done to the dryer internals.

Important! Please ensure that the dyer is only ever installed in an internal environment only (and not outside), or an environment where the dryer could become wet. Never place the dryer near combustible surfaces (such as curtains) and ensure the dryer isn't operating near gas or other flammable materials.

INSTALLATION UPSIDE DOWN (WALL MOUNTED):

→ **Step 1:** Fix the two metal wall brackets onto the wall to align eith the mounting slots on the dryer. Ensure that the wall is of sufficient strength to support the dryer weight.

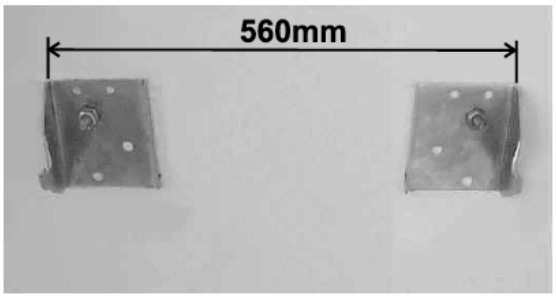

→ **Step 2:** Turn the dryer upside down and insert the plastic supports into their slots, turning them 90 degrees to lock into position.

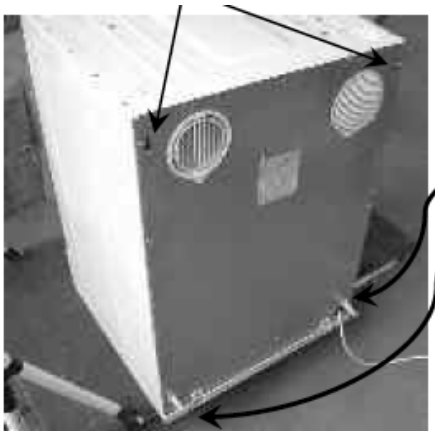

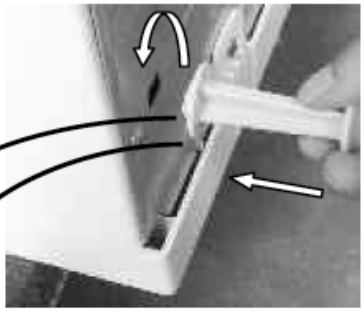

→ **Step 3:** Carefully raise the dryer and hang it on to the wall brackets. This is a 2–3 person job, as the dryer weighs 33kg.

→ **Step 4:** Replace the panel sticker with the inverted option (supplied).

Operating Your Vented Dryer

1. PREPARATION BEFORE DRYER

→ Clothes should be washed before use within the dryer.
→ Always ensure the same types of clothes are dried together.
→ Try to sort your clothes to be dried into load that take a similar time to dry (for example heavier items separate from light items).
→ Make sure any decorations or buttons on your clothing items are safe for high temperatures and well protected.
→ It is recommended to turn your clothes inside-out.
→ Please ensure that the power cord is in perfect condition before use. Should there be any damage to the power cord or plug, please immediately isolate the dryer from power and contact Residentia Group on 1300 11 HELP (4357).

2. CHECK THE FILTER

→ Make sure that the filter is always clean and in the correct position.
→ The filter must be cleaned regularly.

3. LOAD THE DRYER

→ For faster drying results, load the dryer to 1/2 -> 2/3 capacity of the drum. This will allow the clothes and air to circulate evenly.
→ When drying a small load of clothes or even expensive clothes, it's best to add some towels that won't lose fibres, as this will help the wet clothes to dry more evenly.
→ To avoid creases or static charges on your clothes, it's important to ensure you don't over-dry your items.

REFERENCE WEIGHTS OF CLOTHING (WHEN DRY):

Mixed-fabric clothes (about 800g)	Jacket (about 800g cotton)	Jeans (about 800g)	Towel quilt (about 900g cotton)
Single bedsheet (about 600g cotton)	Work clothes (about 1120g)	Sleepwear (about 200g)	Long sleeve shirt (about 300g cotton)
Short sleeve shirt (about 180g cotton)	Short pants (about 70g cotton)	Socks (about 50g mixed-weave)	

4. CLOSE THE DRYER DOOR

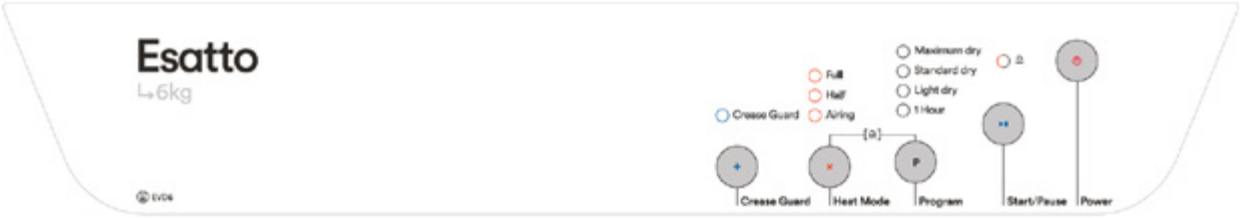

1. Power
2. Start/Pause
3. Program (Maximum Dry, Standard Dry, Light Dry)
4. Heat Mode (Full, Half, Airing)
5. Crease Guard

Note: To use the child safety lock, press the Program and Heat Mode buttons at the same time.

PROGRAM FUNCTIONS:

Program	Max volume of dry clothings	Temperature	Clothings type	Air-cold	Anticrease	Child-lock	Max dry time
1 hour dry	4.0~6.0kg	full √	Quick drying clothes	10min	√	√	70min
	<4.0kg	half √					
	6.0kg	Air-dry √	Fine fabric and clothing not requiring heat to dry				
Light dry	4.0~6.0kg	full √	Chemical fiber and small clothing	10min	√	√	100min
	<4.0kg	half √					
Middle dry	4.0~6.0kg	full √	Cotton weaving and jeans	10min	√	√	120min
	<4.0kg	half √					
Extra dry	4.0~6.0kg	full √	Cotton clothes, jeans and bedsheets	10min	√	√	150min
	2.0~4.0kg	half √					
	<2.0kg	full √	Cotton weaving and jeans	10min	√	√	80min

Note: At the completion of a drying program, the clothes dryer will circulate cold air for 10 minutes. This ensures that your clothing is left at a temperature and that your clothes aren't damaged. The Crease Guard function adds a further 30 seconds after the program to shake the clothes and reduce creasing.

Warning! Always follow the care instructions on each of your garments.

6. END OF THE DRYING PROGRAM

→ At the completion of the program, an audible tone will sound to remind you to remove the clothes from the dryer.

7. TAKE OUT THE PLUG

→ Just to be safe, always unplug the dryer after each use.

8. CLEAN THE FILTER AND INNER DRUM

→ Accumulated dust and fibres will effect the air circulation inside the dryer and will cause longer drying times.

→ Always ensure the dryer is switched off and unplugged before cleaning.

Cleaning and Maintenance

By ensuring proper cleaning and maintenance of your Esatto Vented Dryer, you can ensure that it will have a long and fault free operation.

Warning! To avoid an electric shock, always unplug your dryer before cleaning.

CLEANING THE FILTER

→ Remove the lint filter, located within the door opening.
→ Clean the filter by wiping it with a damp cloth.
→ Once dry, re-fit the lint filter into the door opening.

Important! Clean the filter after each use.

CLEANING THE INNER DRUM

→ Use a soft damp cloth to wipe the inner drum and cabinet.
→ Ensure that the cloth is only slightly damp and never use excessive amounts of water.
→ Do not use scouring pads or other abrasives as these will cause damage to your dryer.
→ Do not use alcohol wipes or harsh cleaning chemicals.

Troubleshooting

OPERATION IN CASE OF EMERGENCY
In the event of an emergency you should:
→ Switch off all oven controls (i.e. Cooking Function and Temperature)
→ Switch the oven off at the isolation switch or at the fuse box.
→ Call the Residentia Support Team on 1300 11 HELP (4357).

Some minor faults can be fixed by referring to the instructions given in the Troubleshooting section below. There is also a self-help section online at http://www.residentiagroup.com.au.

Fault	Cause of fault	Fault indication (lights)	Fault indication (sound)	Solution of alarm
Exceeded temperature alarm	The inner tube temperature exceeds 63°	"middle dry"、"extra dry" indicator flash	The buzzer sounds for 10 seconds. If the program is not solveded, the buzzer sounds every 15 minutes	Turn off the dryer, Wait for the dryer to cool down
Open door alarm	The door has opened during the program	"light dry"、"middle dry" indication flash		Close door
Temperature sensor malfunction alarm	Program start sensor open	"1 hour"、"light dry" indication flash		Reset the dryer. If the problem reoccurs return to manufacturer
	Program start sensor short	"1 hour"、"middle dry" indication flash		

Troubleshooting

Further problem solving

Trouble	Cause	Solution
Dryer won´t start	◆Power cut ◆Power plug not correctly connected ◆Dry clothes exceed maxmum volume ◆Temperature fuse is cut	◆Wait for power to restore ◆Check the power socket and make sure plug is connected tight ◆Remove clothes and check dampness, Max volume of the dryer is 6kg ◆Please careerman exchange the temperature fuse
Dryer releasing extensive heat	◆Lint trap requires cleaning ◆Intake or exhaust passage is obstructed	◆Clean lint trap ◆Clean air intake and exhaust and check for obstructions. (eg. Curtain)
Wet clothes	◆Dryer toofull ◆Clothes left in dryer too long after the end of the program ◆Clothes not assorted properly ◆Wrong temperature for clothes	◆Make sure the dryer is not too full ◆Immedicately remove clothes when program finished ◆See page 7. Observe the maintenance label on clothes
Shrinks clothes	◆Clothes over dried	◆Observe the maintenance label on clothing. Remove clothes from dryer while still damp, finish drying process by hang drying.
Lint balls on clothing	◆Synthetic fibre rubbing with each other cause lint which attaches to clothes	◆Use fabric softener. Please spray settled glue on cuff and neckline when ironing.

Warranty

WARRANTY TERMS AND CONDITIONS
LAUNDRY APPLIANCES

→ This document sets out the terms and conditions of the product warranties for Residentia Group Appliances. It is an important document. Please keep it with your proof of purchase documents in a safe place for future reference should you require service for your Appliance.

1. In this warranty
   (a) 'acceptable quality' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL;
   (b) 'ACL' means Trade Practices Amendment (Australian Consumer Law) Act (No.2) 2010;
   (c) 'Appliance' means any Residentia Group product purchased by you accompanied by this document;
   (d) 'ASR' means Residentia Group authorised service representative;
   (e) 'Residentia Group' means Residentia Group Pty Ltd of 20 Yaltara Avenue, Bundoora Victoria 3083, ACN 600 546 656 in respect of Appliances purchased in Australia;
   (f) 'major failure' as referred to in clause 10 of this warranty has the same meaning referred to in the ACL and includes a situation when an Appliance cannot be repaired or it is uneconomic for Residentia Group, at its discretion, to repair an Appliance during the Warranty Period;
   (g) 'Warranty Period' means:
      (i) where the Appliance is used for personal, domestic or household use (i.e. normal single family use) as set out in the instruction manual, the Appliance is warranted against manufacturing defects in Australia for 12 months following the date of original purchase of the Appliance;
   (h) 'you' means the purchaser of the Appliance not having purchased the Appliance for re-sale, and 'your' has a corresponding meaning.

2. This warranty only applies to Appliances purchased and used in Australia and is in addition to (and does not exclude, restrict, or modify in any way) any non-excludable statutory warranties in Australia.

3. During the Warranty Period Residentia Group or its ASR will, at no extra charge if your Appliance is readily accessible for service, without special equipment and subject to these terms and conditions, repair or replace any parts which it considers to be defective. Residentia Group or its ASR may use remanufactured parts to repair your Appliance. You agree that any replaced Appliances or parts become the property of Residentia Group. This warranty does not apply to light globes, batteries, filters or similar perishable parts.

4. Parts and Appliances not supplied by Residentia Group are not covered by this warranty.

5. You will bear the cost of transportation, travel and delivery of the Appliance to and from Residentia Group or its ASR. If you reside outside of the service area, you will bear the cost of:
   (a) travel of an authorised representative;
   (b) transportation and delivery of the Appliance to and from Residentia Group or its ASR, in all instances, unless the Appliance is transported by Residentia Group or its ASR, the Appliance is transported at the owner's cost and risk while in transit to and from Residentia Group or its ASR.

6. Proof of purchase is required before you can make a claim under this warranty.

Continued over page →

Warranty continued

7. You may not make a claim under this warranty unless the defect claimed is due to faulty or defective parts or workmanship. Residentia Group is not liable in the following situations (which are not exhaustive):
   - (a) the Appliance is damaged by:
     - (i) accident
     - (ii) misuse or abuse, including failure to properly maintain or service
     - (iii) normal wear and tear
     - (iv) power surges, electrical storm damage or incorrect power supply
     - (v) incomplete or improper installation
     - (vi) incorrect, improper or inappropriate operation
     - (vii) insect or vermin infestation
     - (viii) failure to comply with any additional instructions supplied with the Appliance;
   - (b) the Appliance is modified without authority from Residentia Group in writing;
   - (c) the Appliance's serial number or warranty seal has been removed or defaced;
   - (d) the Appliance was serviced or repaired by anyone other than Residentia Group, an authorised repairer or ASR.

8. This warranty, the contract to which it relates and the relationship between you and Residentia Group are governed by the law applicable where the Appliance was purchased.

9. To the extent permitted by law, Residentia Group excludes all warranties and liabilities (other than as contained in this document) including liability for any loss or damage whether direct or indirect arising from your purchase, use or non use of the Appliance.

10. For Appliances and services provided by Residentia Group in Australia, the Appliances come with a guarantee by Residentia Group that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the Appliance repaired or replaced if the Appliance fails to be of acceptable quality and the failure does not amount to a major failure. The benefits to you given by this warranty are in addition to your other rights and remedies under a law in relation to the Appliances or services to which the warranty relates.

11. At all times during the Warranty Period, Residentia Group shall, at its discretion, determine whether repair, replacement or refund will apply if an Appliance has a valid warranty claim applicable to it.

12. To enquire about claiming under this warranty, please follow these steps:
   - (a) carefully check the operating instructions, user manual and the terms of this warranty;
   - (b) have the model and serial number of the Appliance available;
   - (c) have the proof of purchase (e.g. an invoice) available;
   - (d) telephone the numbers shown below.

13. You accept that if you make a warranty claim, Residentia Group and its ASR may exchange information in relation to you to enable Residentia Group to meet its obligations under this warranty.

IMPORTANT Before calling for service, please ensure that the steps in point 12 have been followed.

Service: Please call 1300 11 HELP (4357)
Spare Parts: Please call 1300 11 SPARE (7727)

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Notes

Model Code/s:

EVD6

E2447

Residentia